




INSTALLATION MANUAL

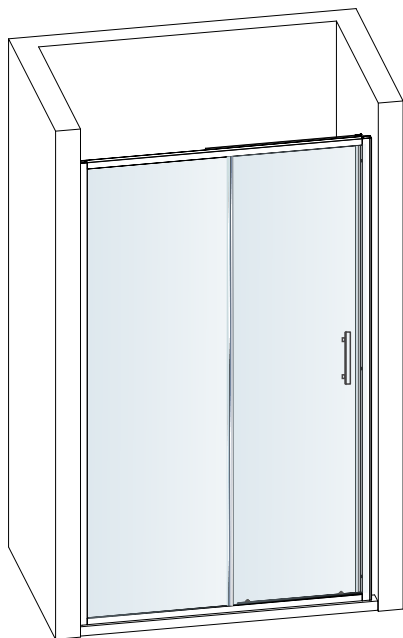


TUŠ VRATA BADEN
120x200cm

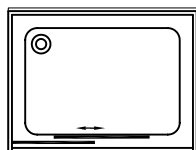


LEFT

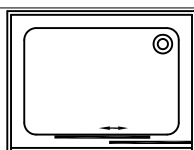

RIGHT

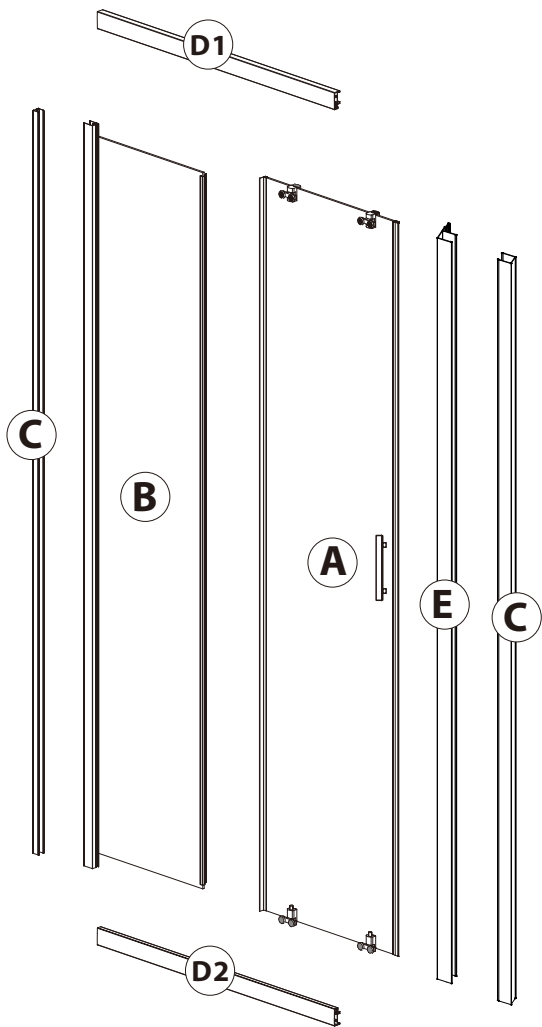

H1



x1

H2



1981mm
X1

H3



1942mm
X1

H4




X1

H5



X1

H6



X6

H7



ST4X30

X6

H8



ST4X12

X6

H9




X6

H10



X2

H11

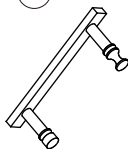

X1

H13



X2

H14





X2


H15














x3

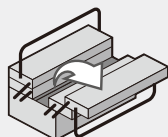



Ø3.0mm
Ø6mm



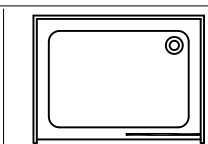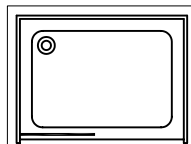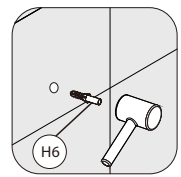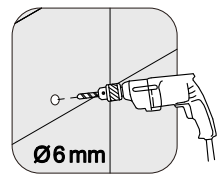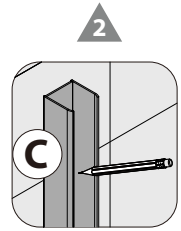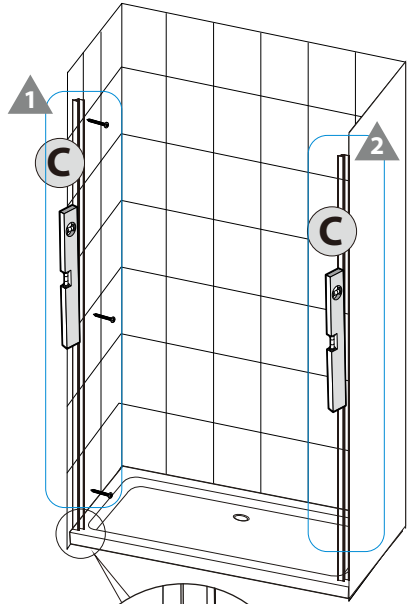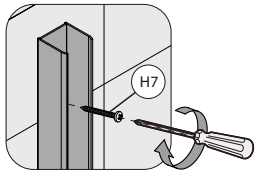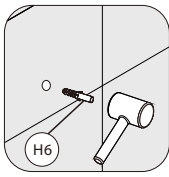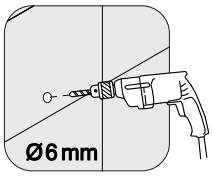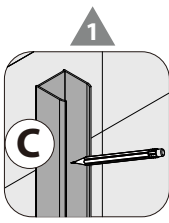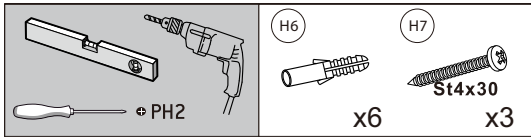

PH2

H1

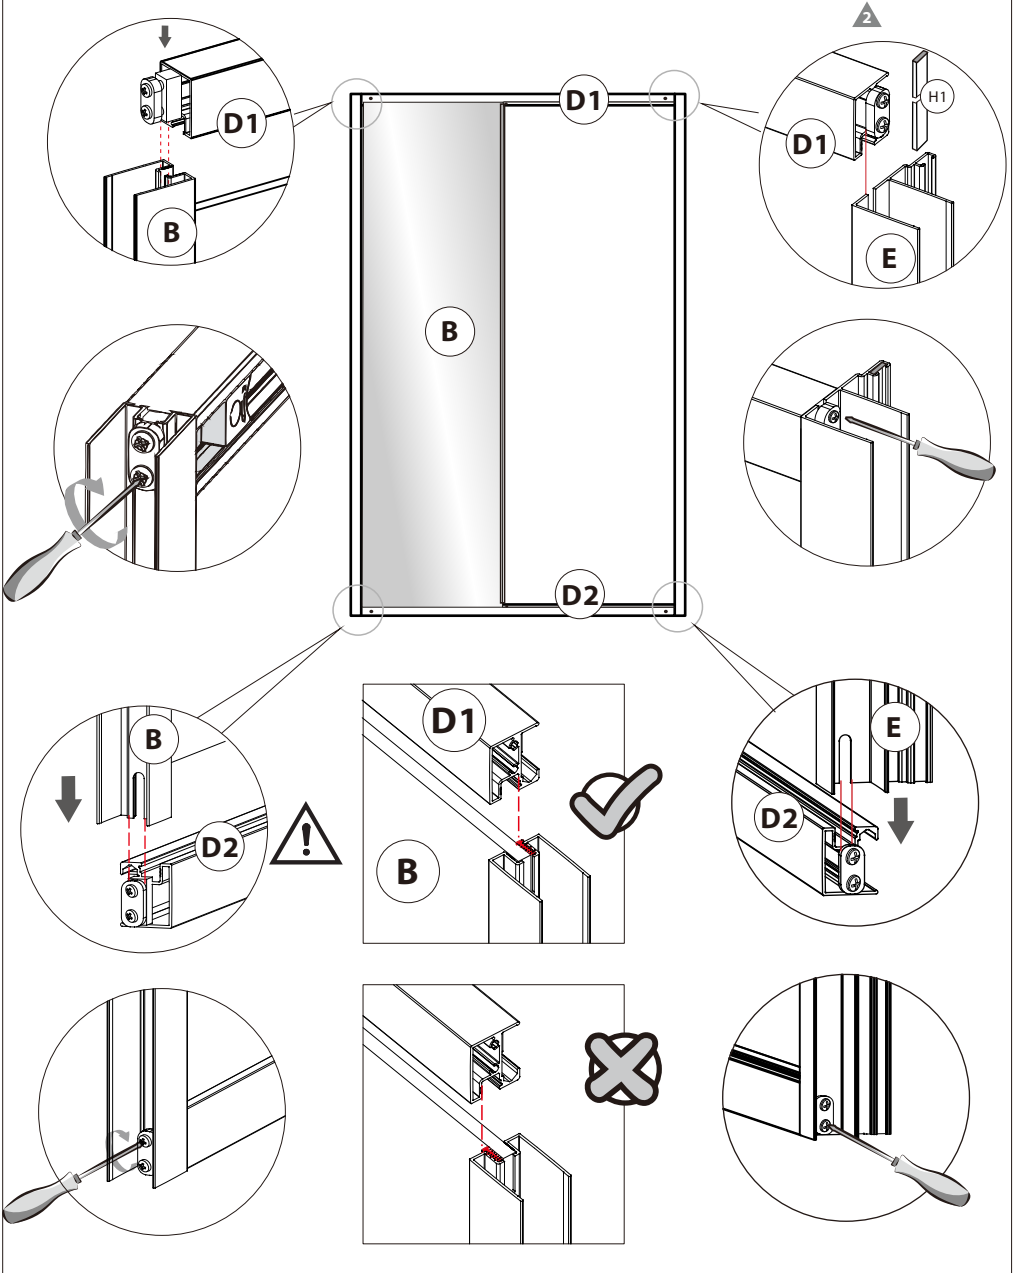

PH2

H7

H15



x3





x3




1942mm X1


4

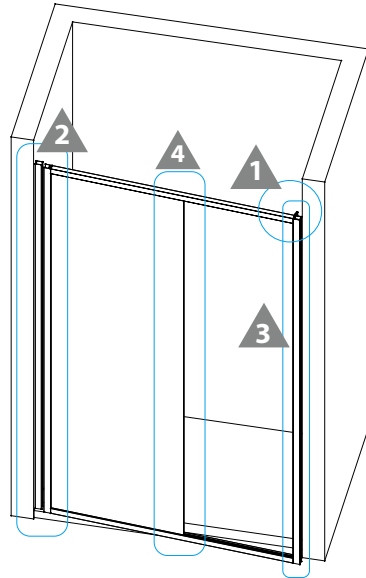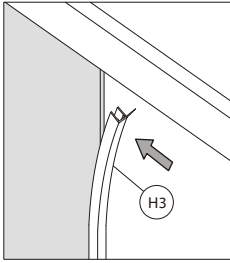


1

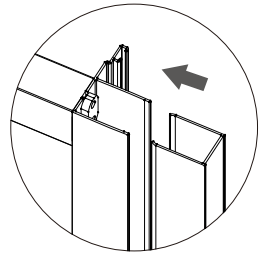


↓

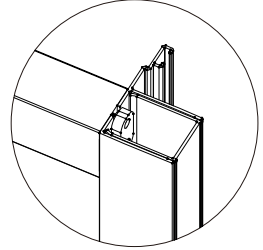


2

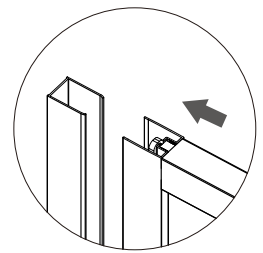


3

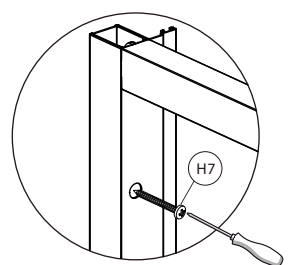


←

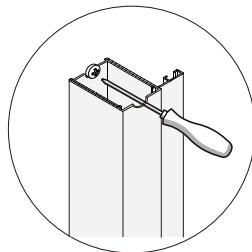

←

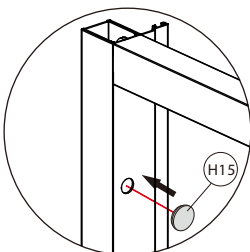

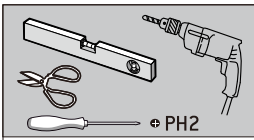

H8



ST4X12

X6

H9



X6

H4




X1

H5









X1

1

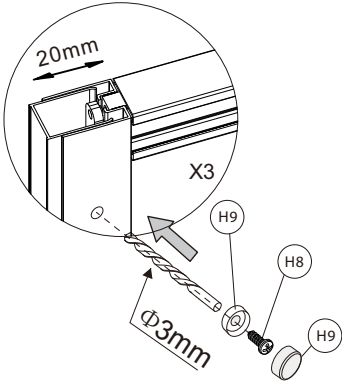

2

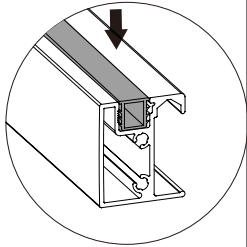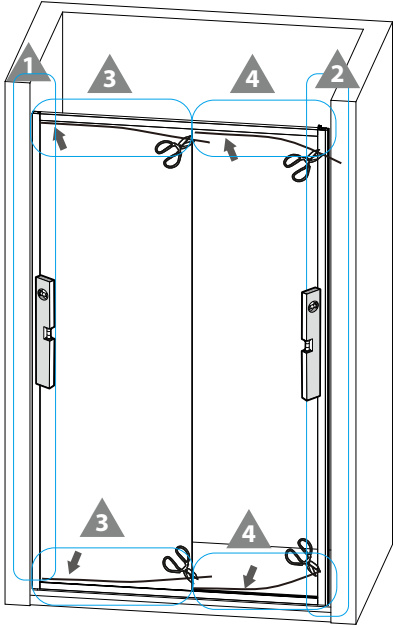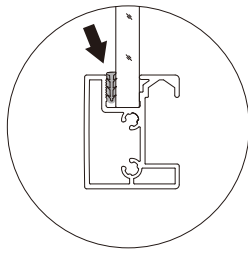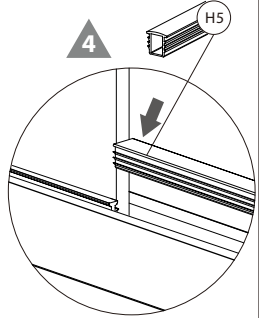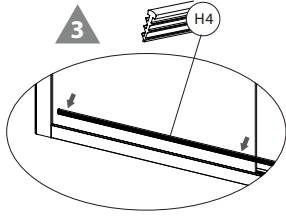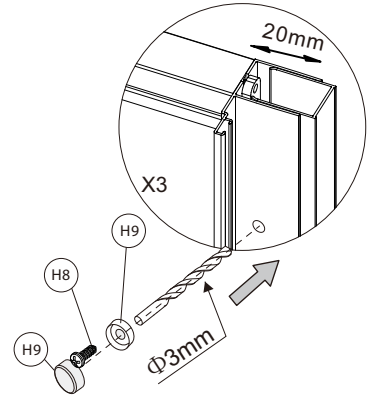

PH2

H1



X1

H2



1981mm
X1

H13




X2

H14




X2

H11





X1



1

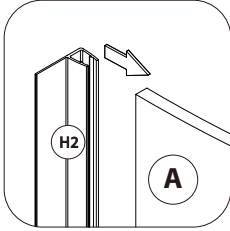


2

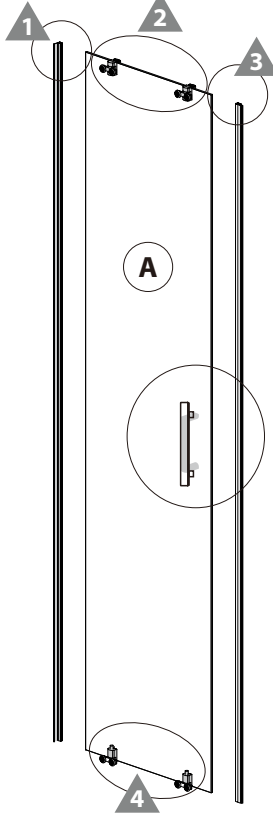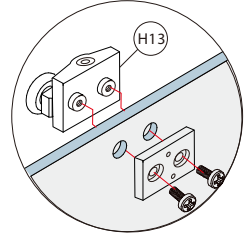



5

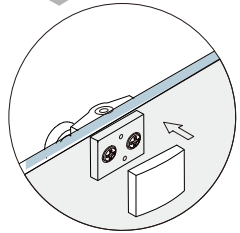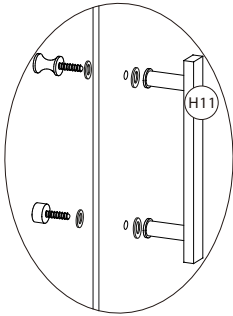








3

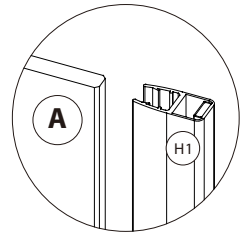


4

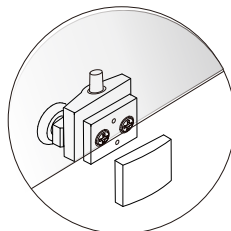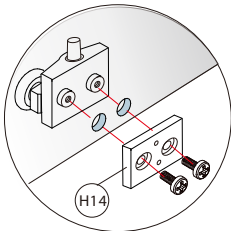

PH2

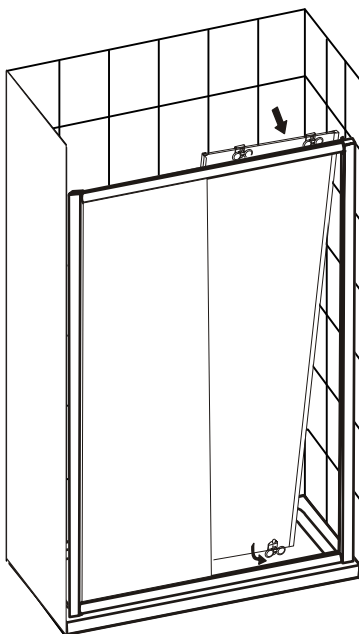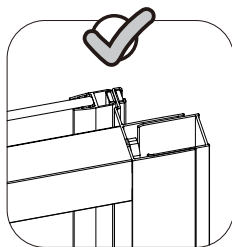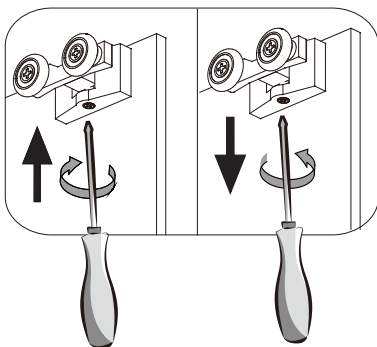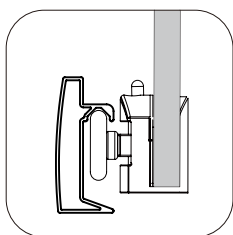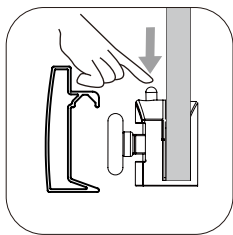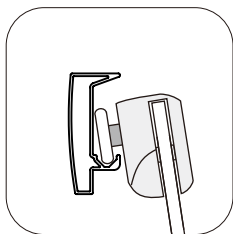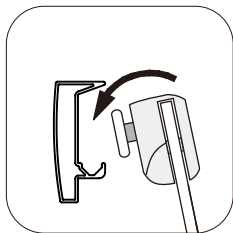




(H10)



X2

1

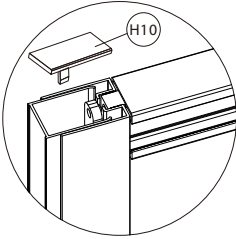

2

