






INSTALLATION MANUAL

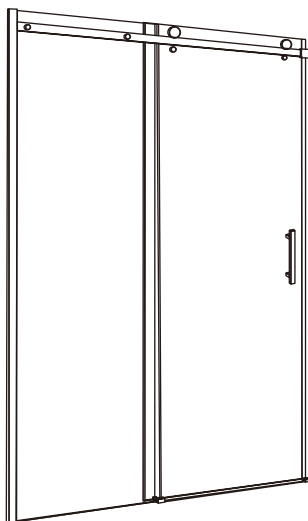


TUŠ VRATA IMPERIAL
120x200cm














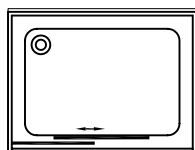



LEFT

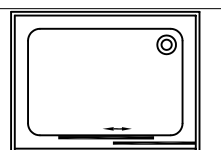









RIGHT


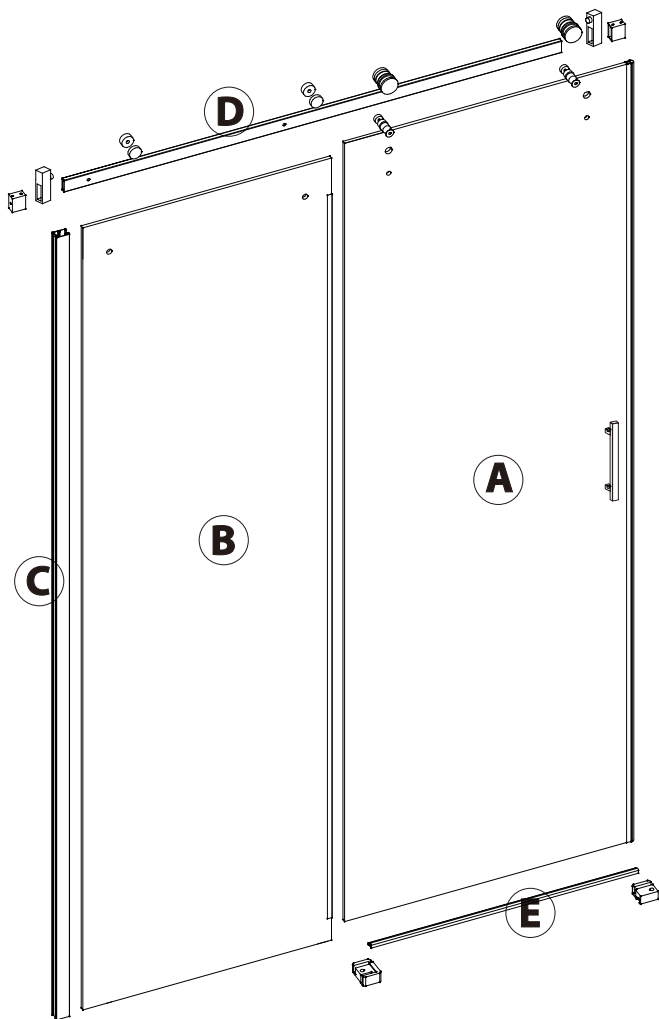


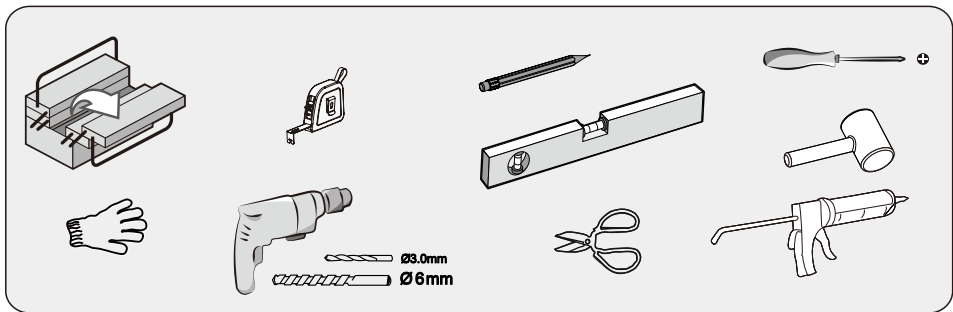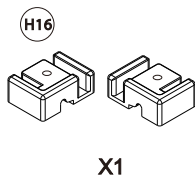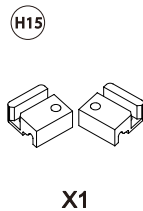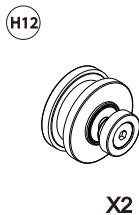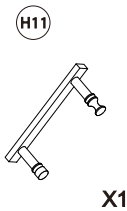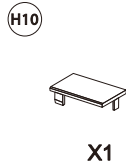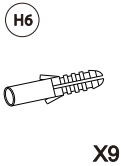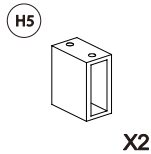


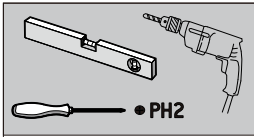

- H1 x1
- H6 X3
- H7 X3
- St4x30 X3

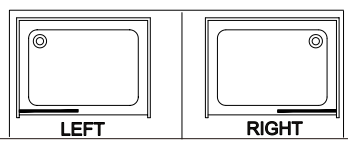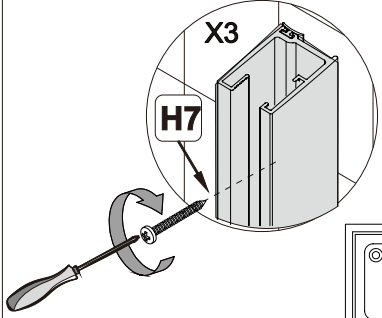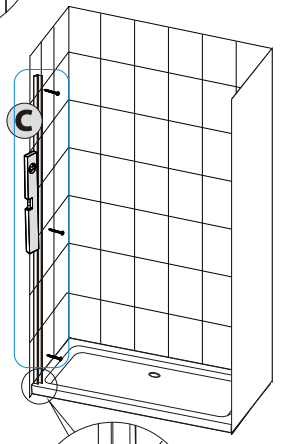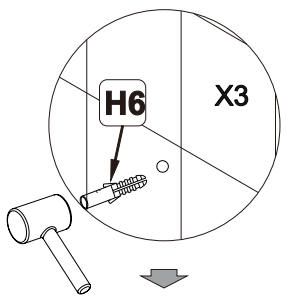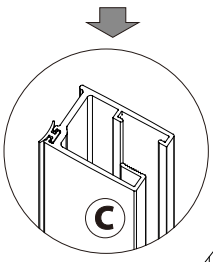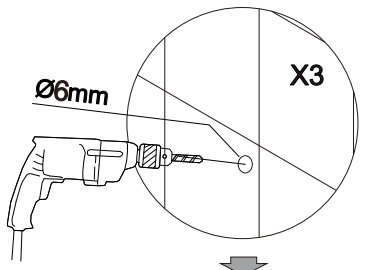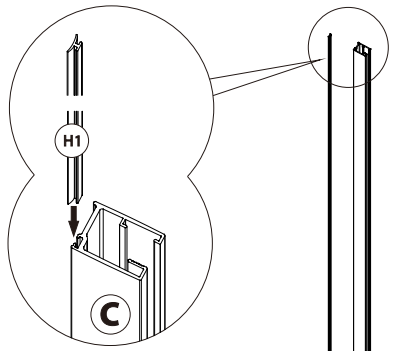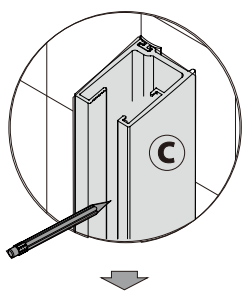

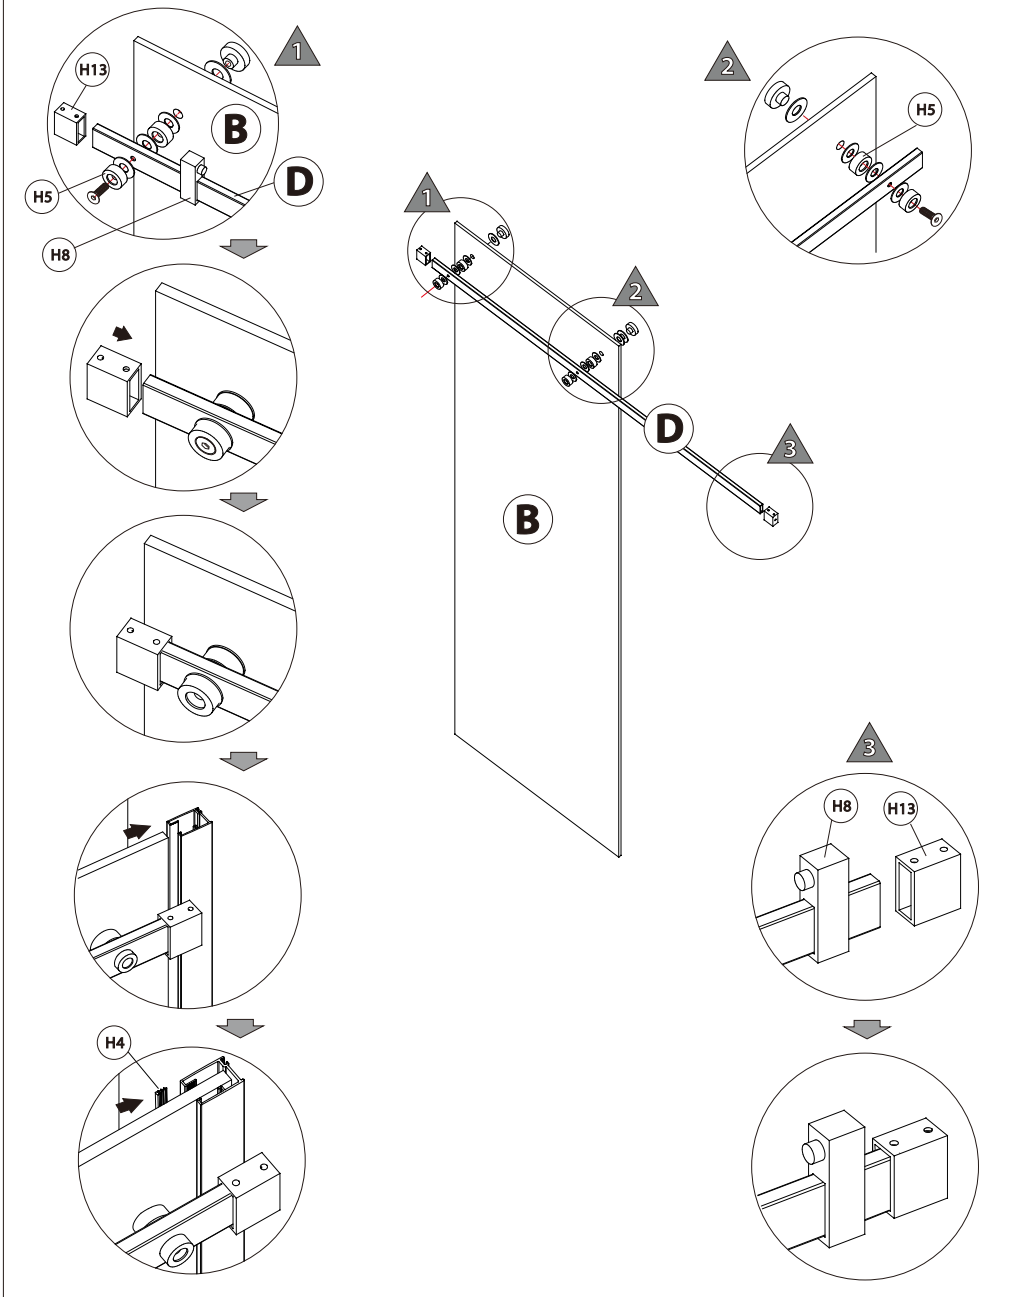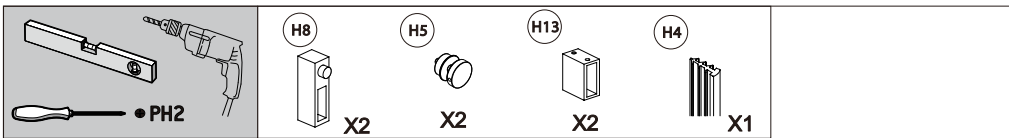

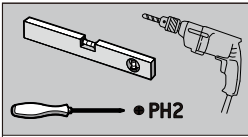

H6 X2
H7 X2
S14x30 X2

